

---

# USER



# MANUAL

---

## TURNING ON THE DEVICES

After fully charging the Coaches Command Center, press the large button on the back of the unit until you hear a “click”. To turn the unit OFF, click the button again until you hear a “Click”(lightly depressing the button will restart it)

### Power Button



After fully charging the Player Receiver Watch, press the “Crown” button on the side of the unit one time and immediately release. To turn the unit OFF, press and HOLD the crown button for 8 seconds until the unit turns off.

### Power Button



## PAIRING THE DEVICES

When your Patriot ConX System arrives, your player Receiver Unit (watches) should be previously “Paired” with your Coaches Command Center. In the unlikely event that you accidentally “Unpair” a watch to the coaches command center, it will look like this:

**4 Digit Encryption  
scrambling code**



On Page 4 of the coaches command center (labeled “Devices”) you will select the + button in the top right corner of your screen. Once the popup window comes up, you will type this 4 digit code in and press ENTER as seen below:




If successful, your Coaches Command Center and your Players Receiver Unit will both restart, and be “Linked”



## CHARGING THE PLAYERS RECEIVER WATCH

To CHARGE the Players Receiver Watch, remove the dust cover beside the crown button to expose the Micro USB port. Here is where you will plug in your provided charging cable. Please only use provided charging cable. DO NOT leave your watch charging for more than 8 hours or leave it unattended for long periods of time.

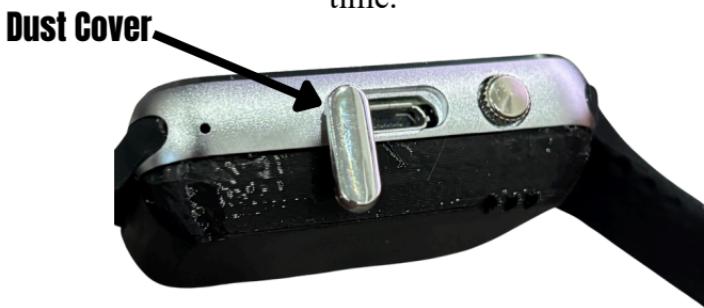

Your Players Receiver Watch will show its battery life in the upper right hand corner while in use, and will display a “Lightning Bolt” when currently charging.



## CHARGING THE COMMAND CENTER

To CHARGE the Coaches Command Center, plug in the provided USB-C cable to the port on the underside of your unit. Please only use provided charging cable. DO NOT leave your Coaches Command Center charging for more than 8 hours or leave it unattended for long periods of time.




On the Coaches Command Center screen, there is NOT a battery meter. Don't Panic, if you charge your coaches command center together with your Player Receiver Watches, your Coaches Command Center should far out last your Player Receiver Watches.

When Plugged into power, this eyeglass pinhole will illuminate a light showing you it is in fact charging.



## EDITING PLAY CALLS

Swipe from right to left to page 4 to the “SETTINGS” Page. To edit Pitch Callouts, Grid Callouts(Locations on page 1), Defensive Callouts(Page 2), or Offensive Callouts(Page 3) click the corresponding “Edit” button. You can “Edit” “Add” or “Delete” any play calls.

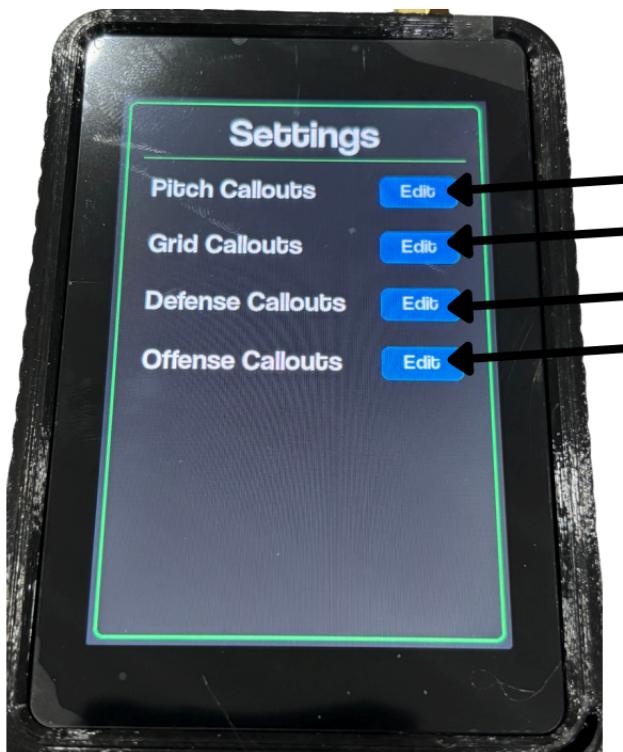

Once you have made your desired EDITS, the changes should immediately be visible on the corresponding play calling pages.

# SENDING PLAY CALLS

Page 1 (Pitch Page)



Pitch Names are displayed on the top portion of the screen

Pitch Locations are displayed on the bottom  $\frac{2}{3}$  of the screen.

You can select up to 2 locations, and a Pitch Name. Example: Fastball up and out. Once you have selected the pitch and location you desire, press “SEND”

Page 2 (Defensive Calls Page)




Page 3 (Offensive Calls Page)



From the Defensive or Offensive calls page, select the desired “call” you have added by editing on page 4, and press “Send Message”.

## Receiving Play Calls

When a Callout is sent from the Coaches Command Center, an immediate VIBRATION will be felt on the Players Receiver Watch. The Message being sent will be displayed here:

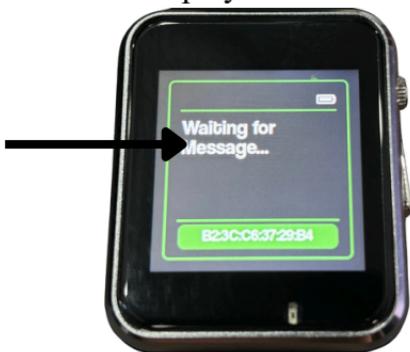

To turn the watch to PRIVACY MODE to make certain unsuspecting eyes are not reading your teams messages, simply PRESS the center of the screen (lightly press, not tap). The screen will go black, or into “privacy mode”. To wake it back up, simply repeat the process by lightly pressing the screen OR wait and the next call will wake it up.

# Troubleshooting

## Players Receiver Watch Wont Turn On?

1. Charge your Watch
2. Hold the Crown button for 30 Seconds
3. Plug it directly into power and then hold the crown button for 30 seconds (It may be in sleep mode)
4. Contact Patriot ConX.

## Coaches Command Center Wont Turn On?

1. Charge your Coaches Command Center
2. Contact Patriot ConX.

## My watch is Unpaired.

This is due to user-error, and not happening at random. From the player receiver watch, occasionally a player may unknowingly swipe right to the unpairing screen. If this happens, it is no big deal. Just follow the instructions to repair the watch and continue use.

Both the Coaches Command Center and Players Receiver Watch are pressure sensitive screens, not heat sensitive like a cell phone. lightly pressing and “dragging” the screens will operate much smoother than “flicking” to turn the pages. This is implemented so both screens can be operated with gloves on.

Always make certain both the Coach’s Command Center and the Player Receiver Watch(s) are fully charged before use. In the event it is needed, for long days you can bring a portable charger to charge any, and all devices needed in-between games.

ONLY use provided charging cables for Patriot ConX electronics.  
***for any other questions or troubleshooting, please contact***  
***[Info@PatriotConX.com](mailto:Info@PatriotConX.com)***